

Basic Navigation Tips

In i-Guide, **blue** is the highlight color. To navigate the guide, use the arrows on your remote control. The highlight appears on-screen to indicate your current selection.

Press **◀ ▶ ▲ ▼** buttons on your remote to move the highlight.

Press **OK/SELECT** to confirm your selection.

Press **EXIT** on your remote to return to watching TV.

